

# MAINTENANCE


The charger enclosure does NOT need to be opened for routine maintenance tasks.

1. Regularly clean the external surfaces of the equipment with a damp cloth  
In order to avoid damaging the surface smoothness, do not clean the internal parts with soluble substances and alcohol.
2. Regularly inspect the exterior of the equipment for visual damage, if damage affects safety, isolate the equipment and prevent its use until appropriate repairs have been completed.
3. Once a year, the charger and switchgear (if installed) should be electrically inspected by an appropriately qualified electrician in accordance with the current legislation for the installation location. A record of the tests and results must be kept.

# TROUBLESHOOTING

Red light flashing	One fast, two slow	CP fault
	Two fast, two slow	Leakage current fault
	Two fast, one slow	Over current
	Three fast, one slow	Leakage current fault
	Three fast, two slow	Under voltage fault
	Four fast, one slow	Over voltage fault
	Six fast, two slow	Adhesion fault
	Seven fast, one slow	Earth fault
	Red light glowing	Over temperature
	Six fast, three slow	Electronic lock fault
	Three fast, three slow	Free fault

**Note:** when the fault occurs, please try to unplug the gun or power off to restart.  
If the fault cannot be deleted, contact the after service department.

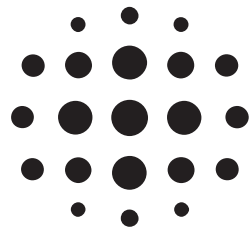

# ellenox

**ELLENOX LTD**

Carelia Court, Graham Road, W4 5DR ,LONDON

Tel: 020 8050 0852

Email: [info@ellenox.uk](mailto:info@ellenox.uk)

**Product Disposal**

In accordance with European Directive 2002/96/EC on waste electrical and electronic equipment and its implementation in national law, used electrical devices must be collected separately and recycled in an environmentally responsible manner.

Ensure you return your used device to your dealer or obtain information regarding a local, authorised collection and disposal system. Failure to comply with this EU Directive may result in a negative impact on the environment.

